HOME
DECORATORS
C O L L E C T I O N

BF-25029 PROVENCE DOUBLE SINK CABINET 35H×62W×22D

INV#11127

ASSEMBLY INSTRUCTIONS

Made In China

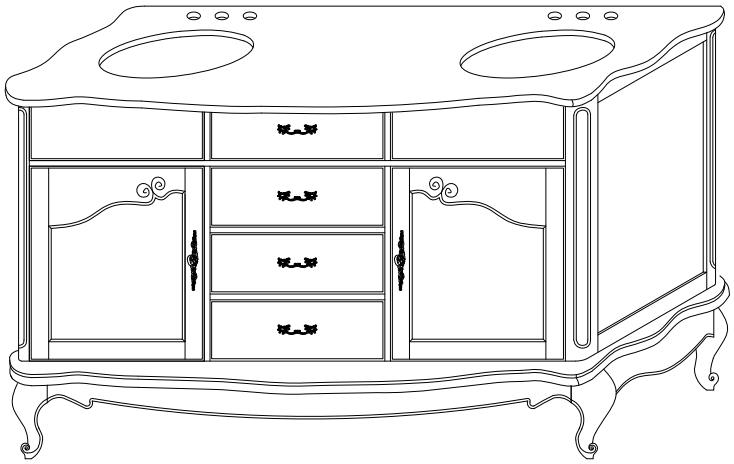

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP FRAME-1PC	B  BOTTOM PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  LEGS-4PCS	F BACK PANEL-1PC
G 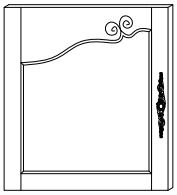 LEFT DOOR-1PC	H 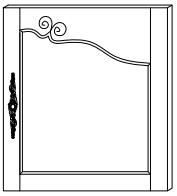 RIGHT DOOR-1PC	I  LEFT STAND PANEL-1PC
J  RIGHT STAND PANEL-1PC	K  ACROSS PANELS-2PCS	L 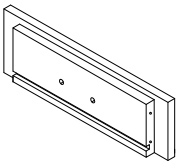 DRAWER PANEL FRONTS-3PCS

M  LEFT DRAWER PANEL SIDES-3PCS	N 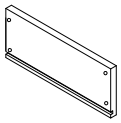 RIGHT DRAWER PANEL SIDES-3PCS	O 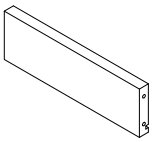 DRAWER PANEL BACKS-3PCS
P 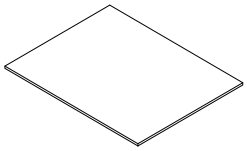 DRAWER PANEL BOTTOMS-4PCS	Q  SHELVES-2PCS	R  CAM-BOLTS-24PCS
S CAM-LOCKS-24PCS	T HANDLES-3PCS	U 7mm × 5/8"  SCREWS-30PCS
V 8mm × 5/8" SCREWS-8PCS	W 11mm × 1-1/2"  SCREWS-4PCS	X  ALLEN WRENCH-1PC
Y  WASHERS-8PCS	Z  FEET-4PCS	A1  SMALL MAGNETS-2PCS
B1  FEMALE MAGNETS-2PCS	C1 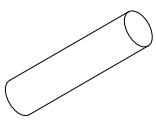 SHELF SUPPORTS-8PCS	D1 5mm × 1/2" SCREWS-2PCS

E1 HANDLES-2PCS	F1 13mm × 1-3/4"  SCREWS-8PCS	G1  HINGES-4PCS
H1 6mm × 1/2" SCREWS-24PCS	I1 ALLEN WRENCH-1PC	J1 CAM-TOOL-1PC
K1 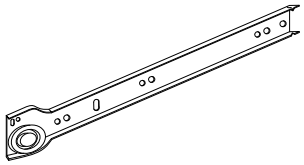 LEFT OUTER SLIDERS-3PCS	L1 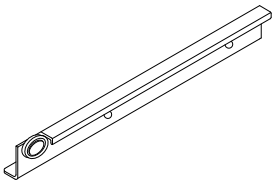 LEFT INNER SLIDES-3PCS	M1 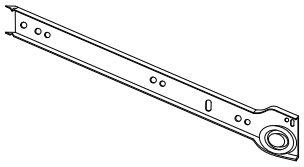 RIGHT OUTER SLIDERS-3PCS
N1 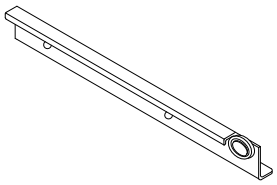 RIGHT INNER SLIDES-3PCS	O1 6mm × 3/8"  SCREWS-42PCS	P1 6mm × 1"  SCREWS-24PCS
Q1 7mm × 5/8"  SCREWS-4PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

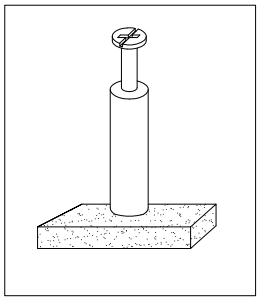

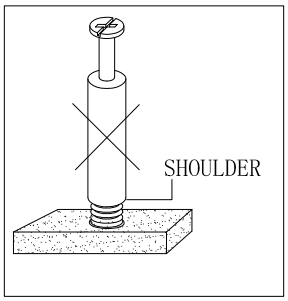

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

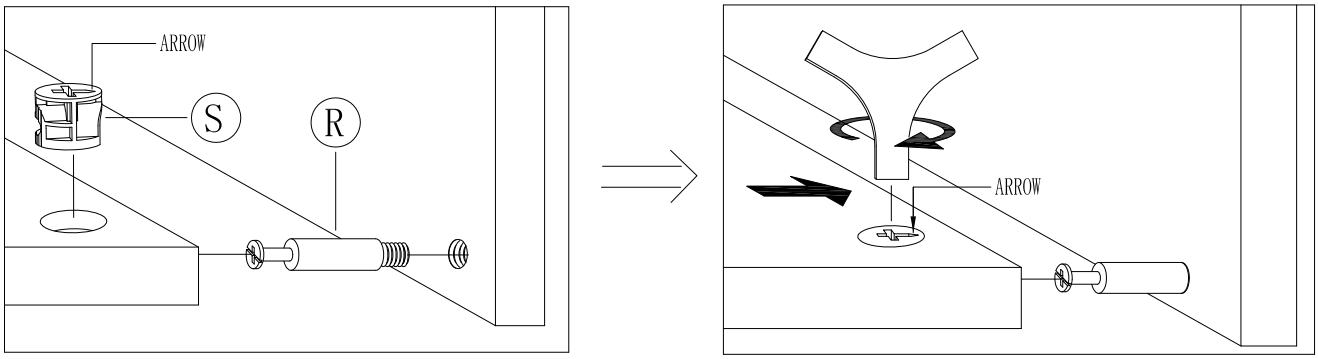

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

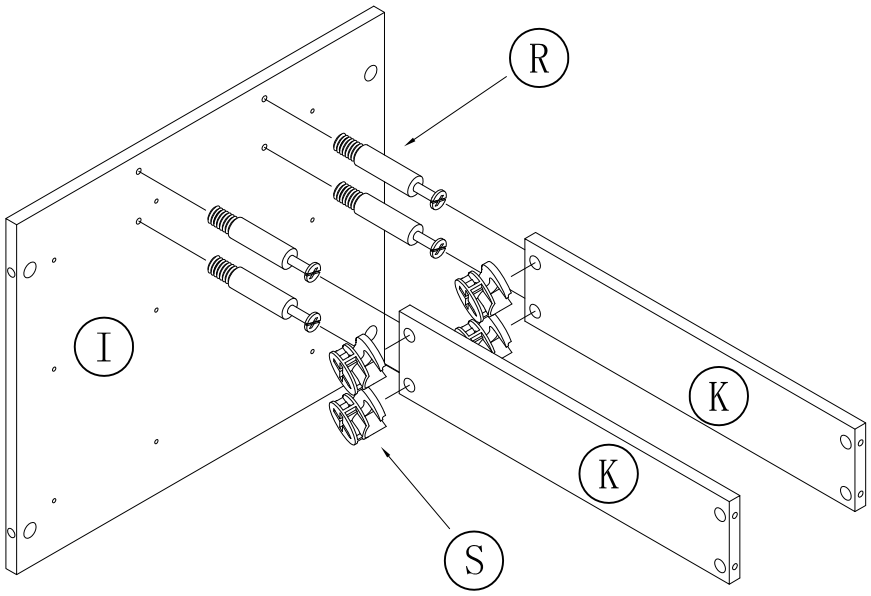

1). ASSEMBLE THE LEFT STAND PANEL(I).

- ROTATE 4 CAM-BOLTS(R) INTO THE HOLES IN THE LEFT STAND PANEL(I).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANELS(K) AND ATTACH USING 4 CAM-LOCKS(S).

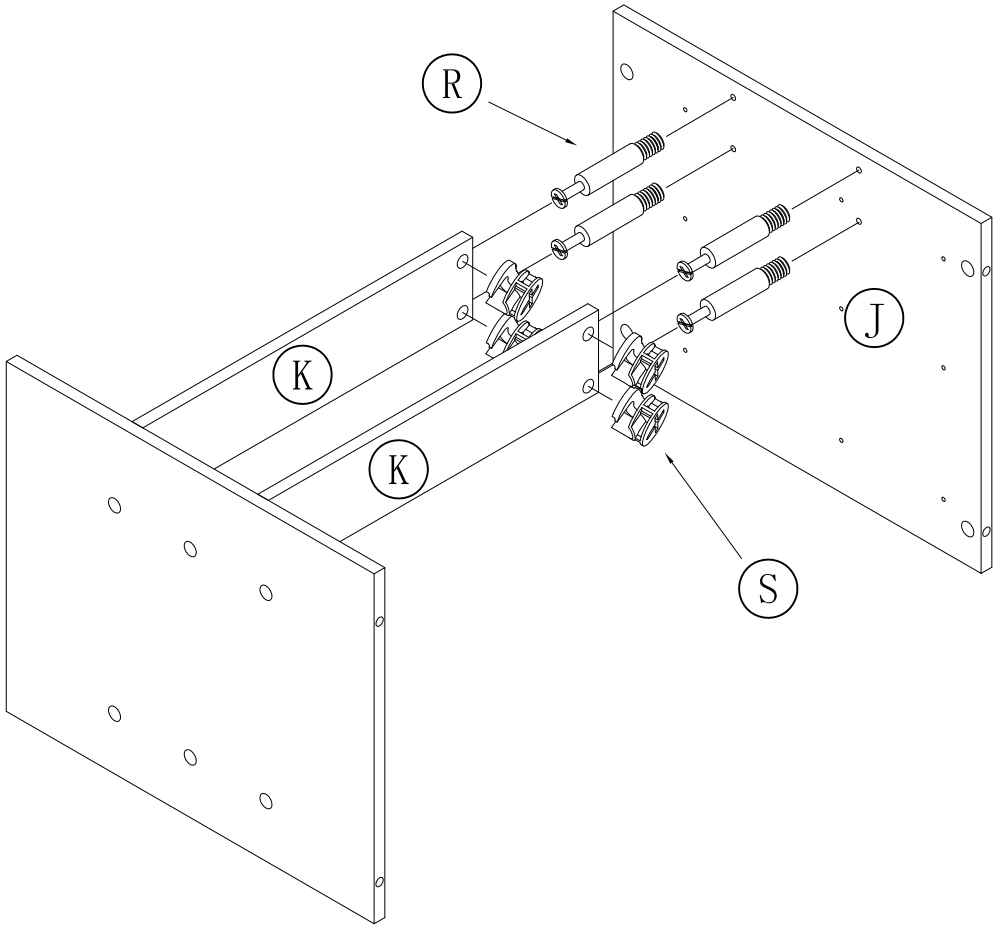

2). ASSEMBLE THE RIGHT STAND PANEL(J).

- ROTATE 4 CAM-BOLTS(R) INTO THE HOLES IN THE RIGHT STAND PANEL(J).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANELS(K) AND ATTACH USING 4 CAM-LOCKS(S).

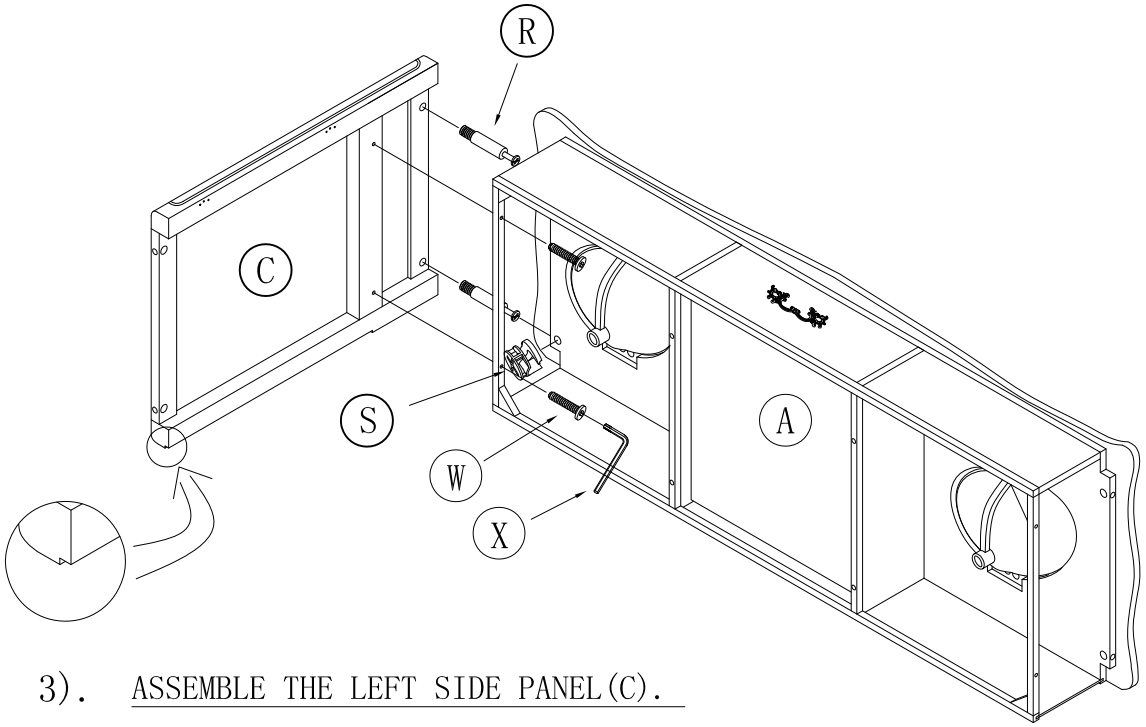

3). ASSEMBLE THE LEFT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(R) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE TOP FRAME(A) AND ATTACH USING 2 CAM-LOCKS(S).
- ROTATE 2 SCREWS(W) INTO THE HOLES IN THE TOP FRAME(A).

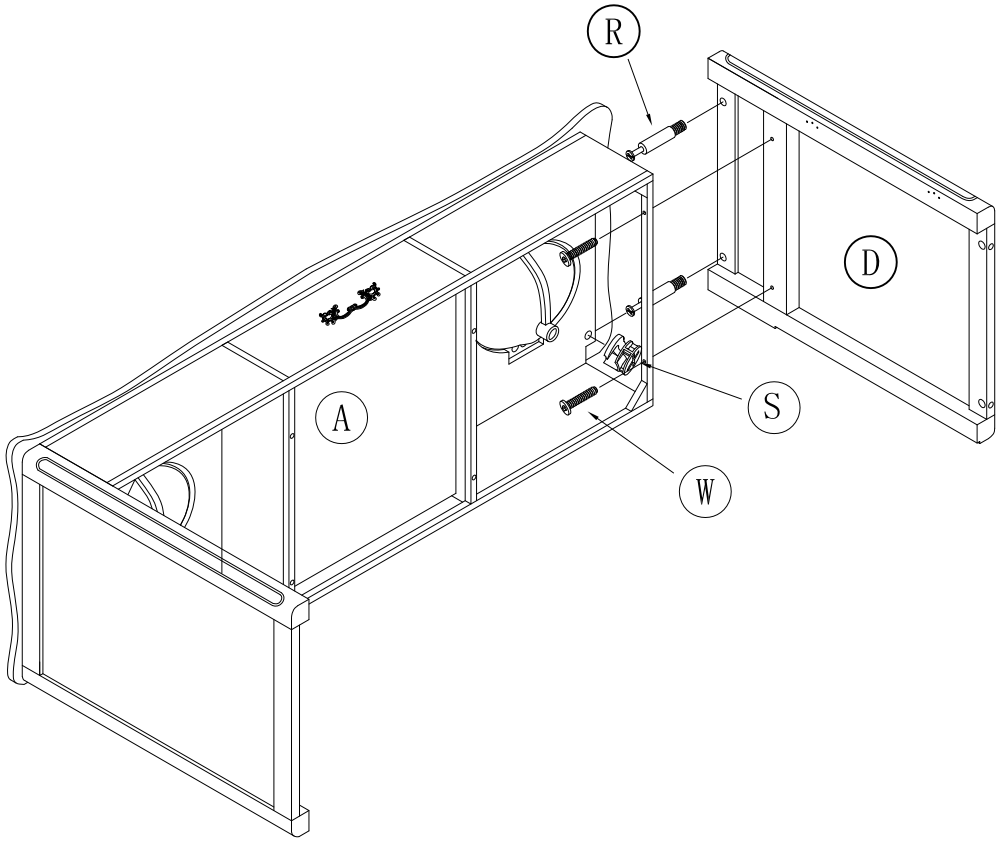

4). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ROTATE 2 CAM-BOLTS(R) INTO THE HOLES IN THE RIGHT SIDE PANEL(D).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE TOP FRAME(A) AND ATTACH USING 2 CAM-LOCKS(S).
- ROTATE 2 SCREWS(W) INTO THE HOLES IN THE TOP FRAME(A).

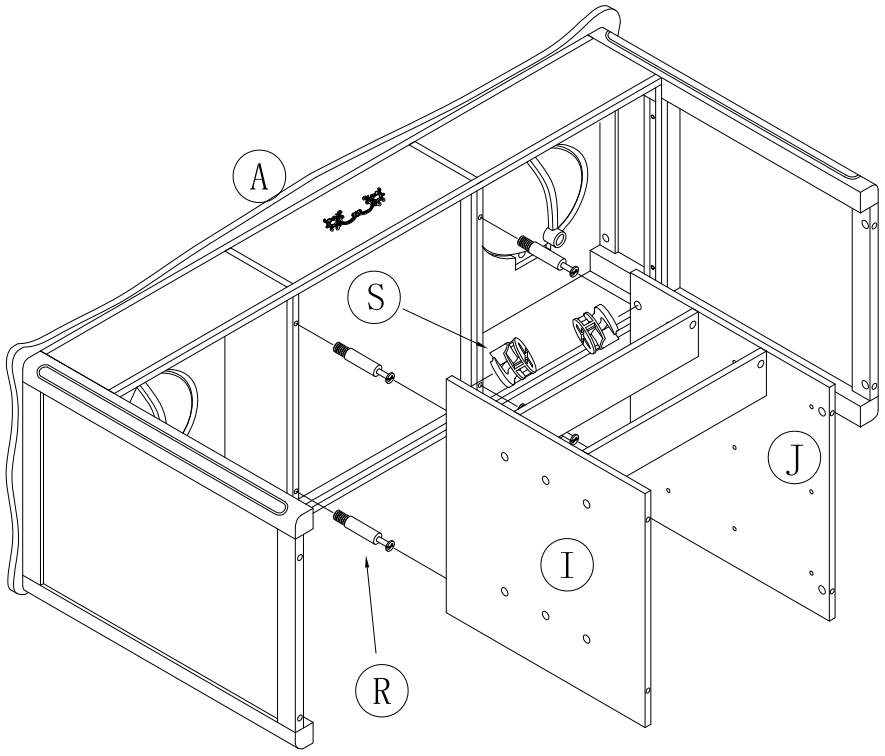

5). ASSEMBLE THE STAND PANEL(I/J).

- ROTATE 4 CAM-BOLTS(R) INTO THE HOLES IN THE TOP FRAME(A).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(I/J) AND ATTACH USING 4 CAM-LOCKS(S).

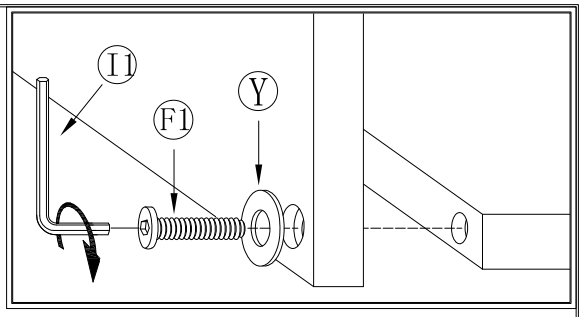

HOW TO USE THE ALLEN WRENCH

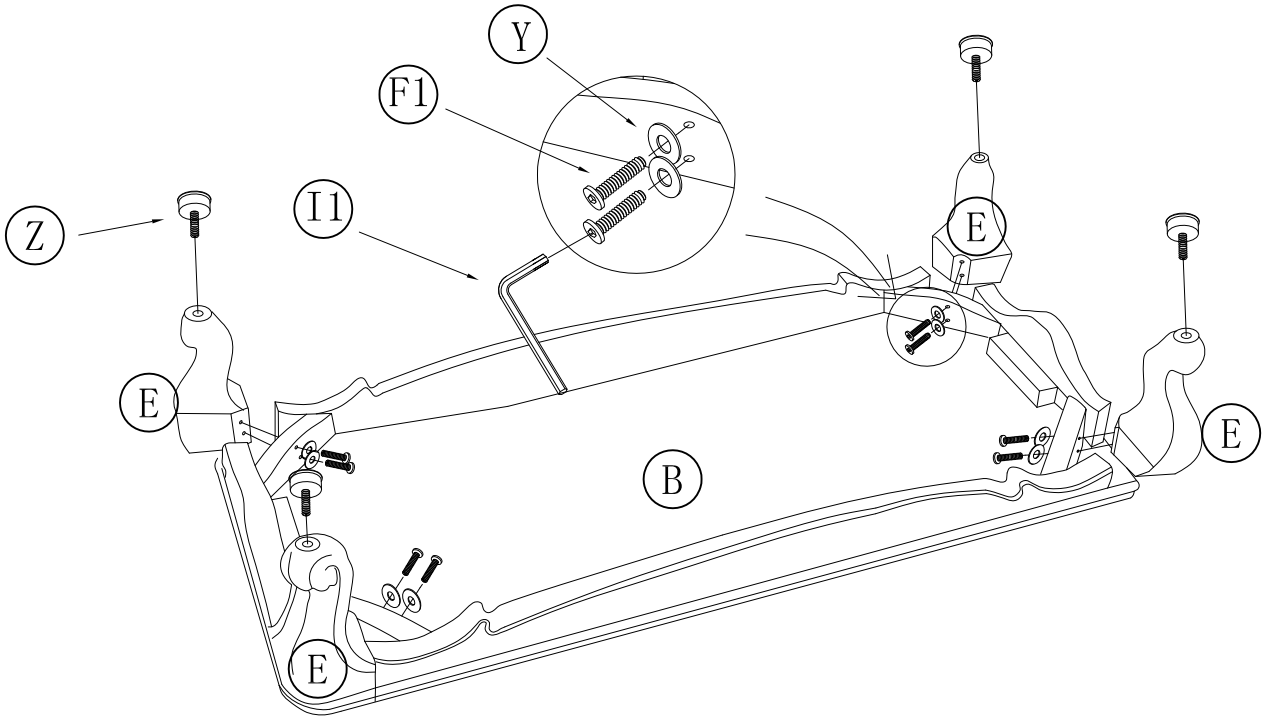

6). ASSEMBLE THE LEGS(E).

- ATTACH 4 LEGS(E) TO BOTTOM PANEL(B) USING 8 SCREWS(F1) AND 8 WASHERS(Y).
- ROTATE 4 FEET(Z) INTO THE HOLES IN THE LEGS(E).

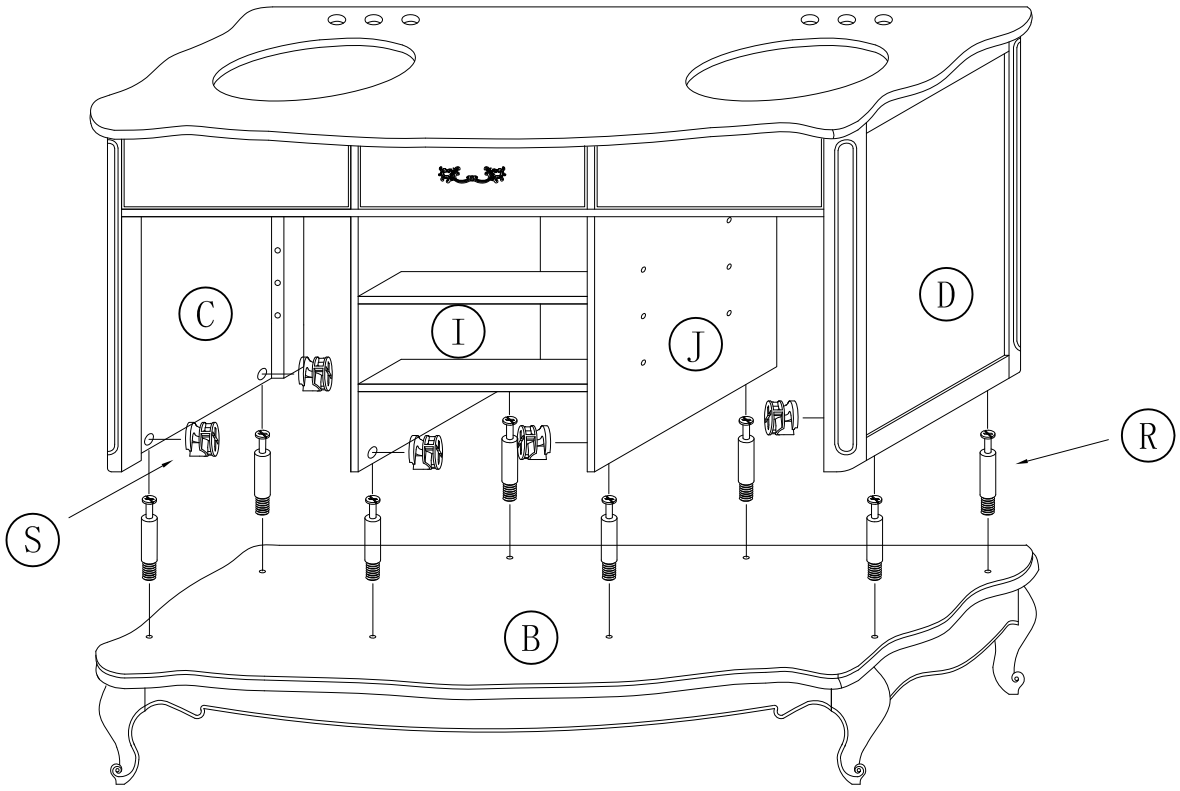

7). ASSEMBLE THE BOTTOM PANEL(B).

- ROTATE 8 CAM-BOLTS(R) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(C/D/I/J) AND ATTACH USING 8 CAM-LOCKS(S).

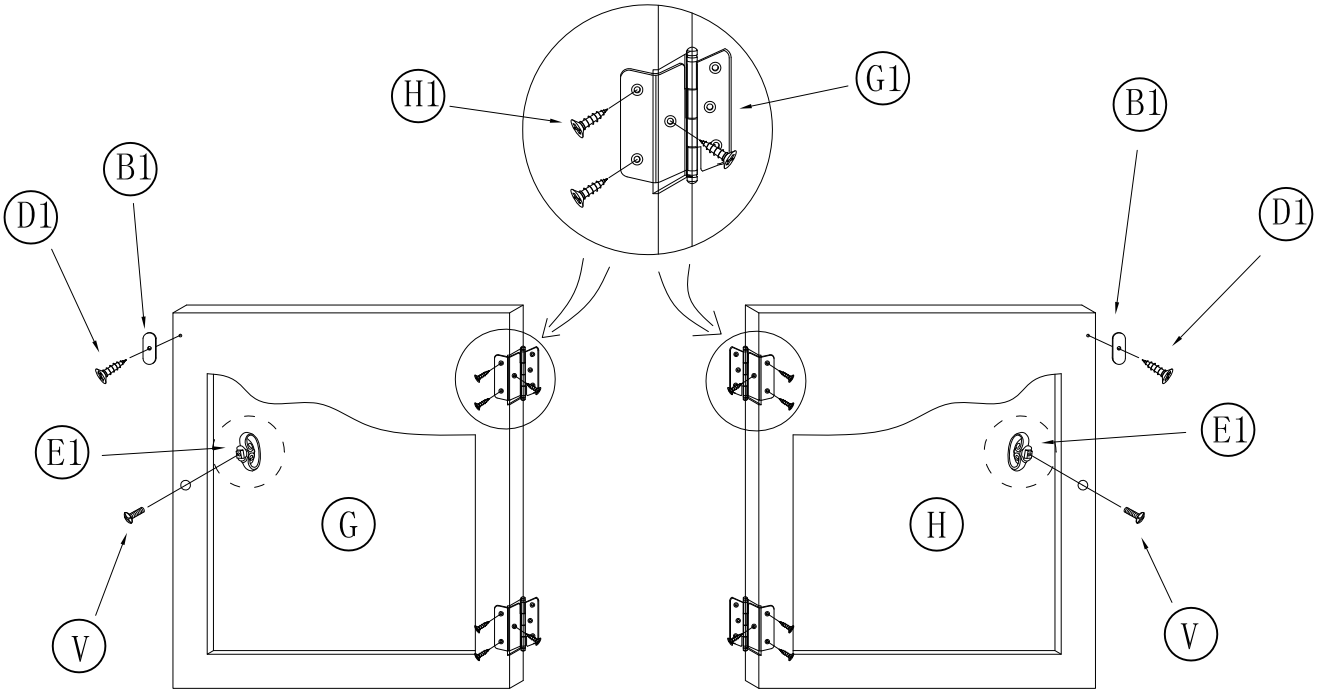

8). ASSEMBLE THE DOOR(G/H).

- ATTACH 2 HANDLES(E1) TO DOOR(G/H) USING 2 SCREWS(V).
- ATTACH 2 FEMALE MAGNETS(B1) TO DOOR(G/H) USING 2 SCREWS(D1).
- ATTACH 4 HINGES(G1) TO DOOR(G/H) USING 12 SCREWS(H1).

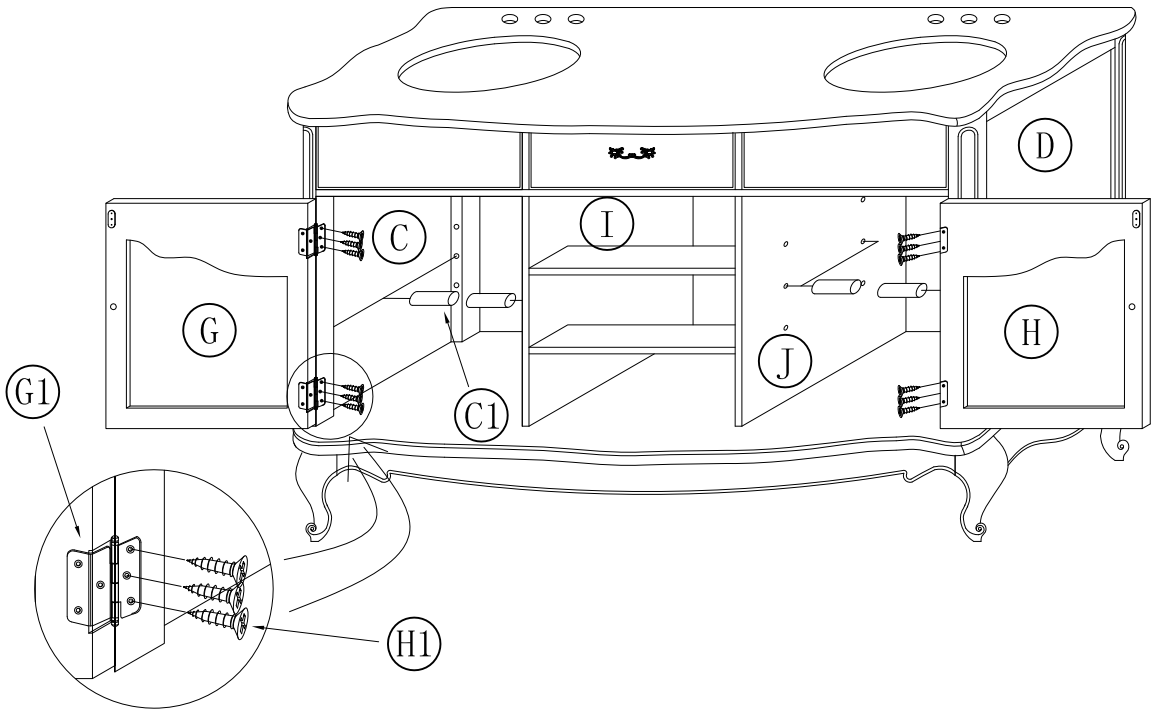

9). ASSEMBLE THE DOOR(G/H).

- ATTACH THE DOOR(G/H) TO SIDE PANEL(C/D) USING 12 SCREWS(H1).
- INSERT 8 SHELF SUPPORTS(C1) INTO THE HOLES IN THE PANEL(C/D/I/J).

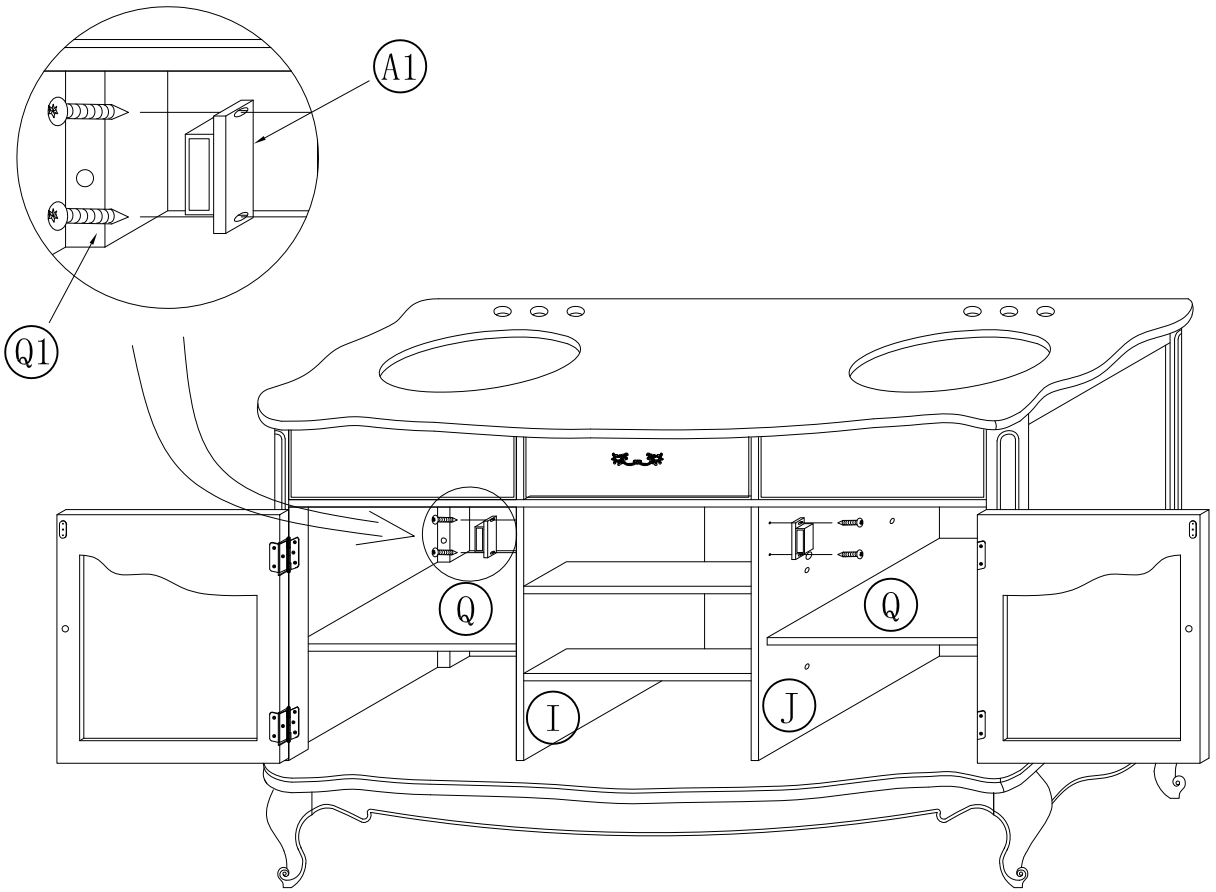

10). ASSEMBLE THE SMALL MAGNETS(A1) AND PANELS(Q).

- ATTACH 2 SMALL MAGNETS(A1) TO PANEL(I/J) USING 4 SCREWS(Q1).
- PLACE THE SHELVES(Q) ONTO THE SHELF SUPPORTS(C1).

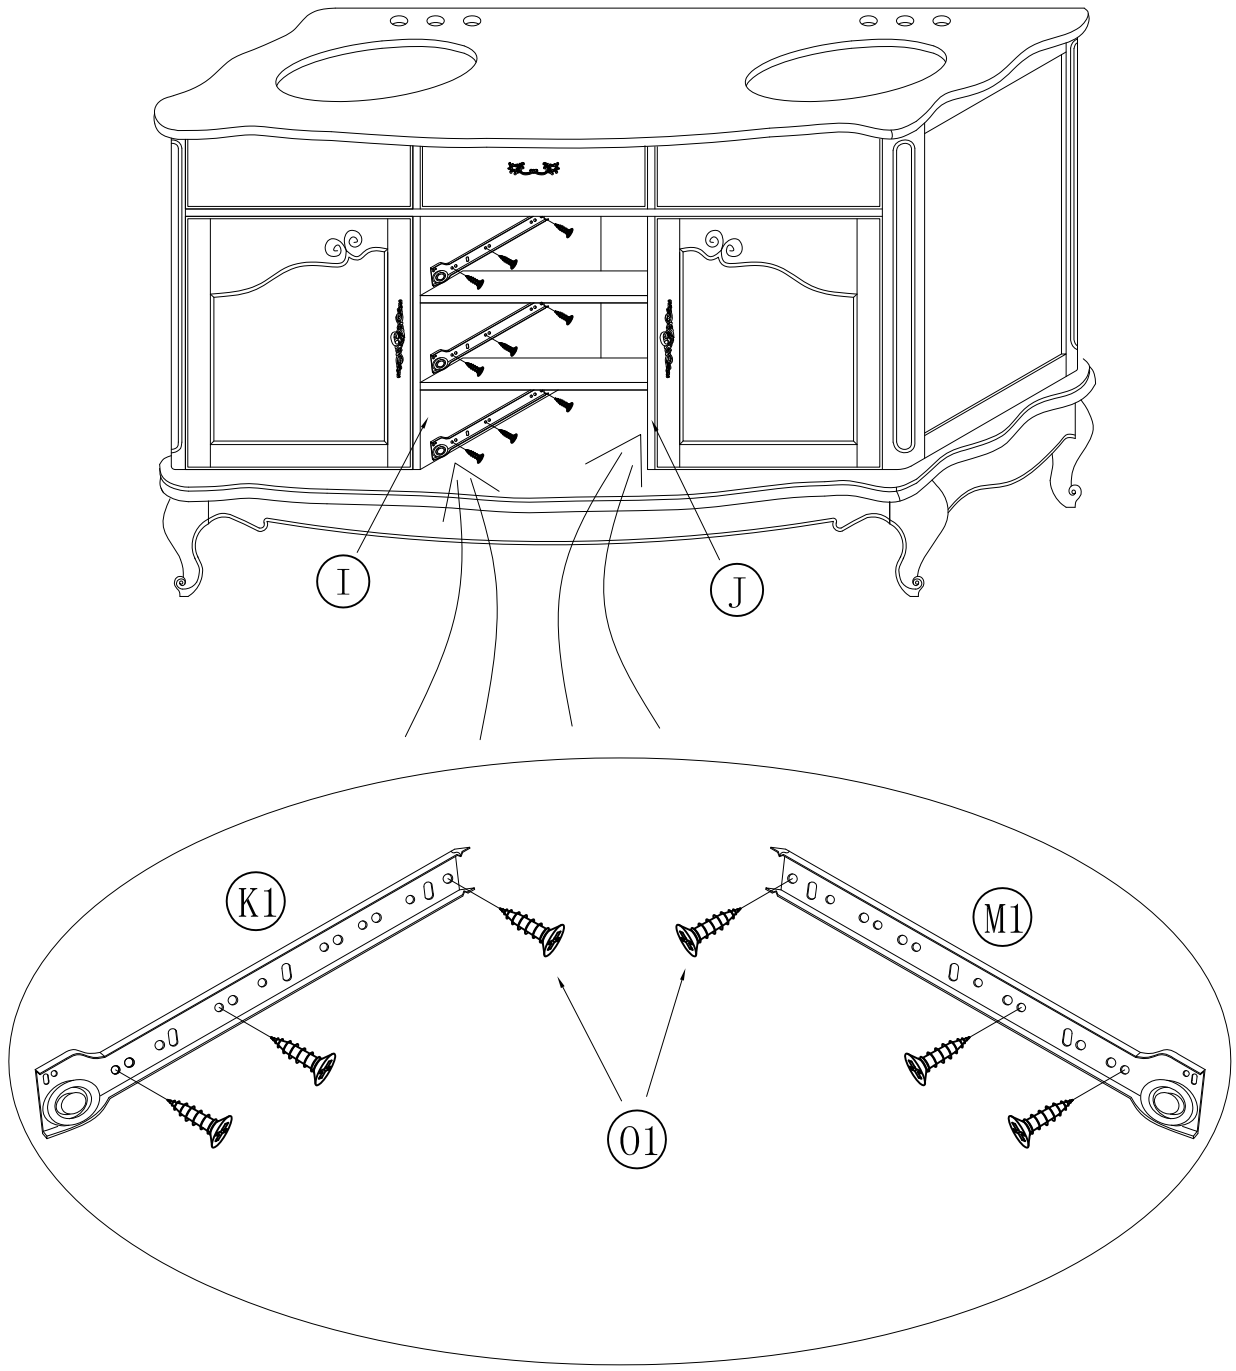

11). ASSEMBLE THE OUTER SLIDES(K1/M1).

● ATTACH 3 OUTER SLIDES(K1/M1) TO STAND PANEL(I/J) USING 18 SCREWS(01).

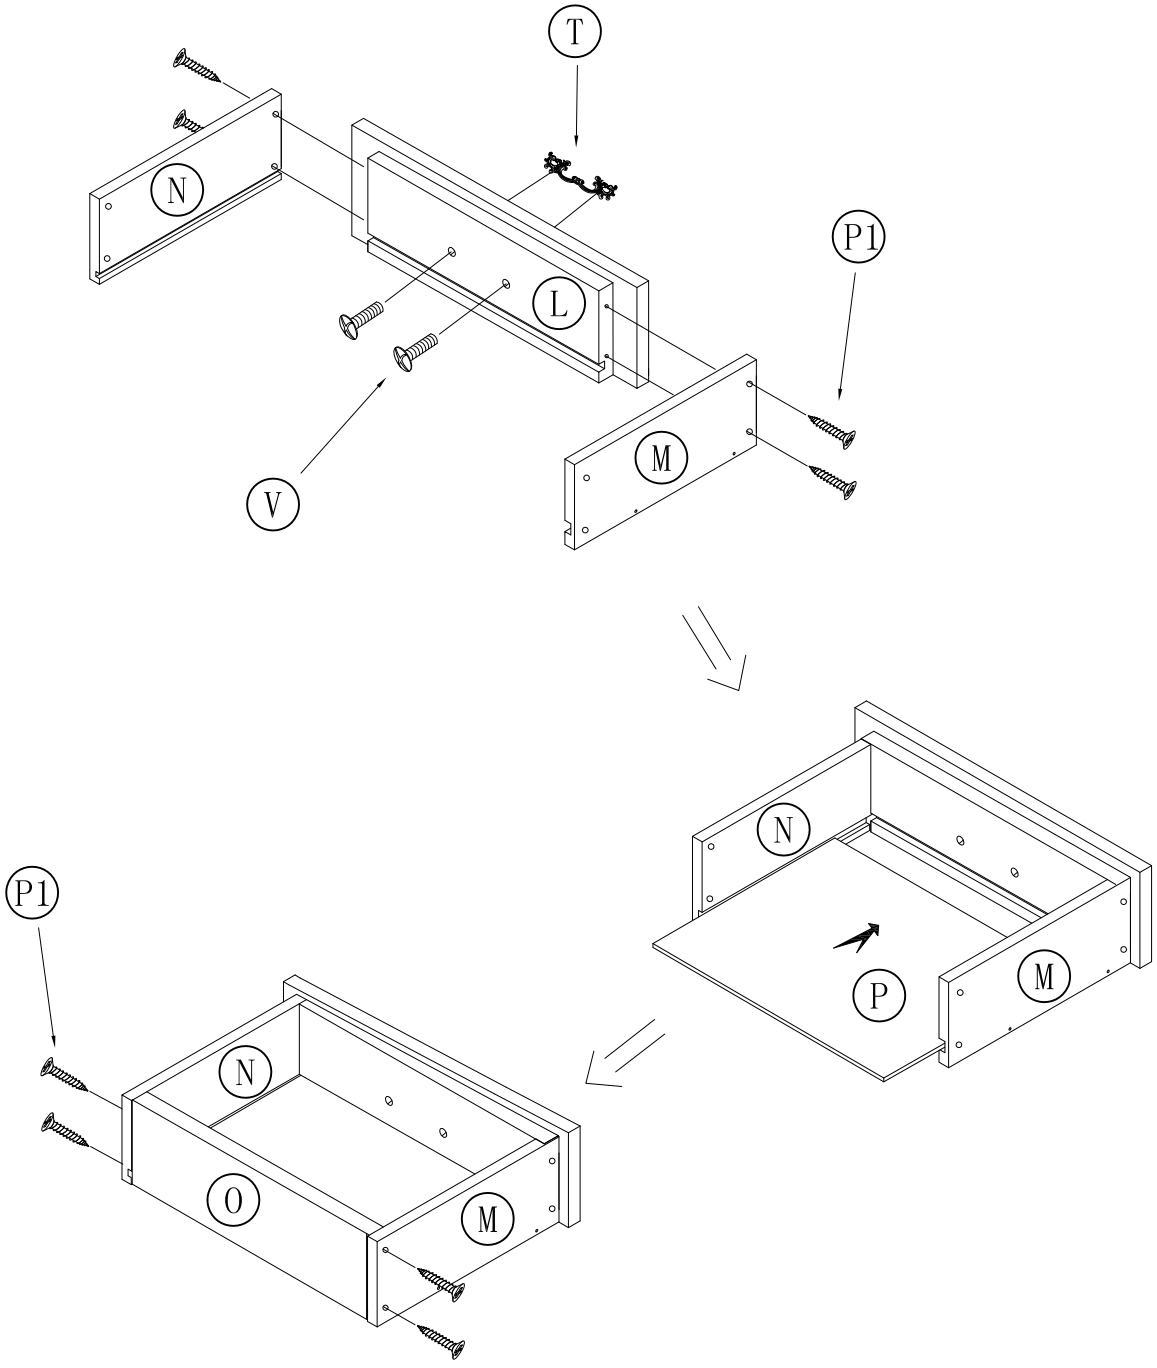

12). ASSEMBLE THE DRAWERS.

- ATTACH DRAWER PANEL SIDE(M/N) TO DRAWER PANEL FRONT(L) USING 4 SCREWS(P1).
- ATTACH A HANDLE(T) TO DRAWER PANEL FRONT(L) USING 2 SCREWS(V).
- INSERT THE DRAWER PANEL BOTTOM(P) INTO THE SLOTS IN THE DRAWER PANEL SIDES(M/N).
- ATTACH DRAWER PANEL BACK(O) BETWEEN LEFT DRAWER PANEL SIDE(M) AND RIGHT DRAWER SIDE(N) USING 4 SCREWS(P1).

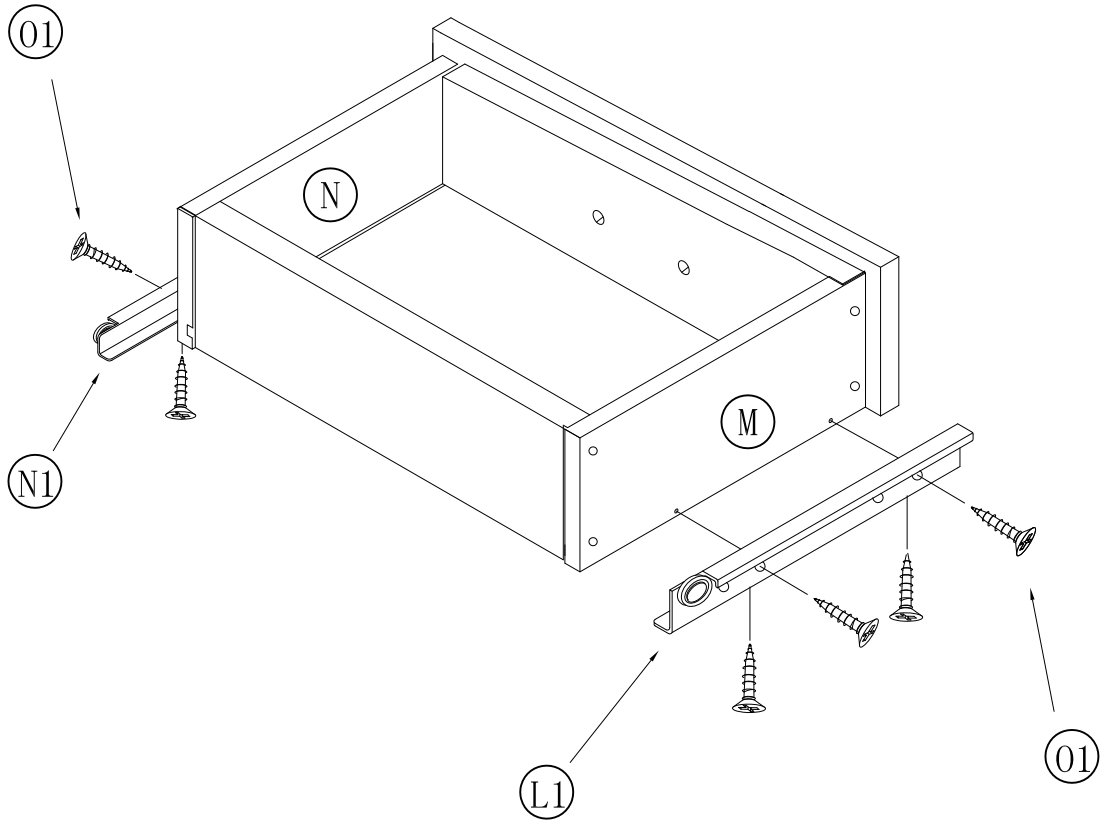

13). ASSEMBLE THE INNER SLIDES(L1/N1).

● ATTACH THE INNER SLIDES(L1/N1) TO DRAWER PANEL SIDE(M/N) USING 8 SCREWS(01).

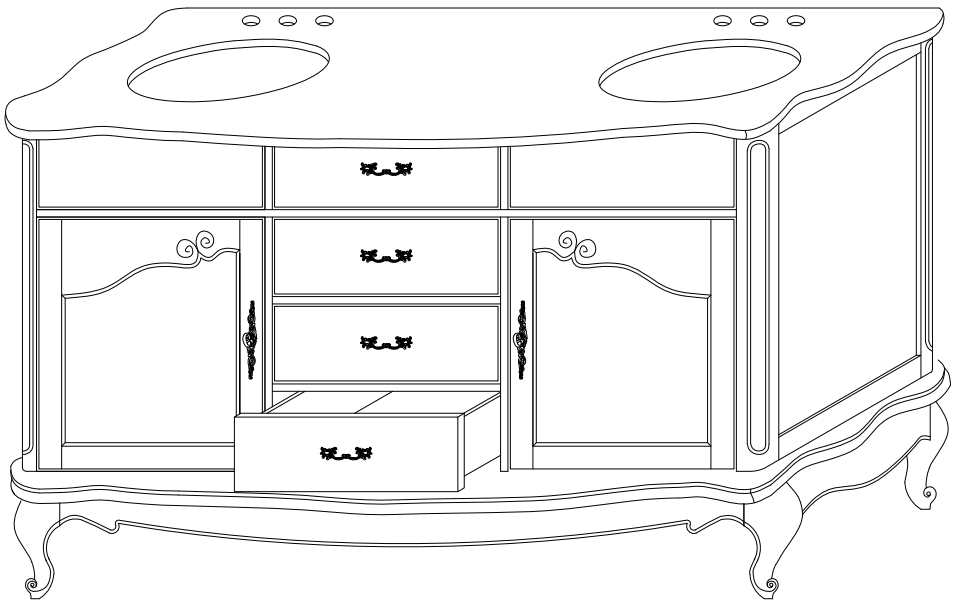

14). ASSEMBLE THE DRAWERS.

- SLIDE THE DRAWERS INTO THE SLIDERS.

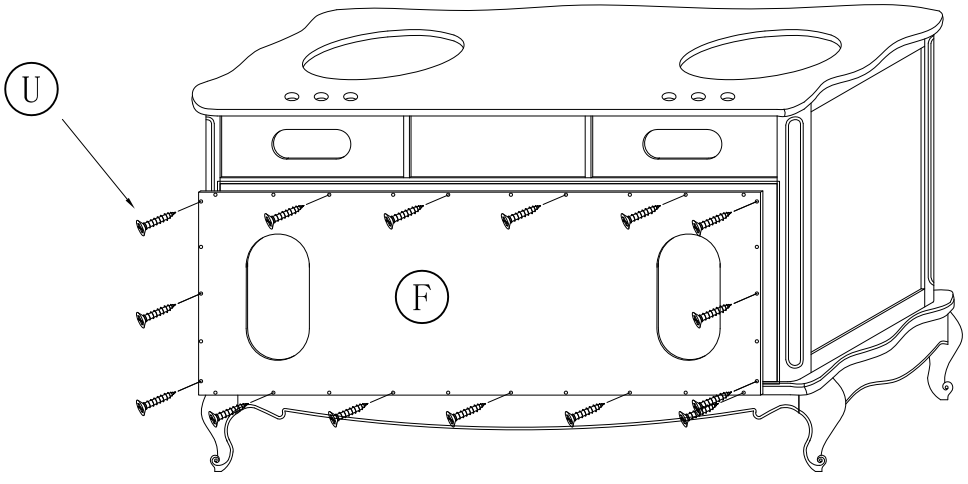

15). ASSEMBLE THE BACK PANEL(F).

- ATTACH THE BACK PANEL(F) USING 30 SCREWS(U).